


3450 Sabin Brown Road • Wickenburg, AZ 85390
Phone: (800) 992-3833 or (928) 684-2813 Fax: (928) 684-7041
BNRebarTools.com

Optional Shoe & Collar for HB-16W Portable #5 Rebar Bender

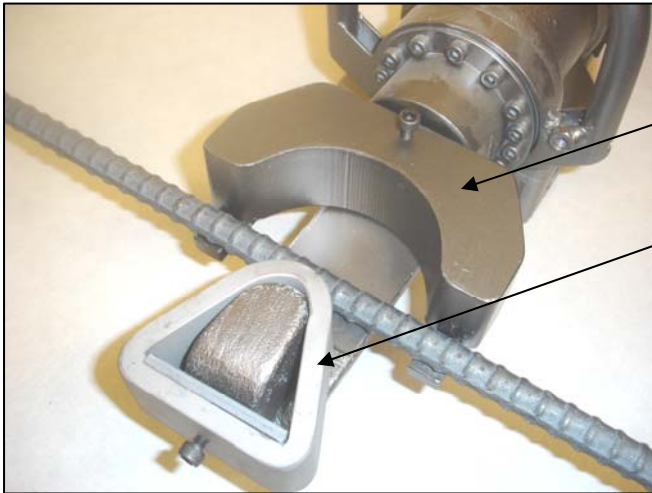

Optional 90 degree Bending Shoe (1HB16041A) and Larger Radius Bending Collar (1HB3107800)

Ask for part # Shoe /Collar

To install 90 degree Bending Shoe and Larger Radius Bending Collar

1. Simply remove the (#8) bending angle marker and (#9) standard 0-135 degree pivot shoe (refer to HB-16W handling instructions).
2. Attach 90 degree bending shoe to piston/ring and tighten cap bolt.
3. Slide larger radius bending collar over housing bending horn and tighten cap bolt (this will minimize breakage on grade 60 rebar).
4. Place rebar flat & level between shoe and collar before starting bend.
5. Pull the (#3) on/off switch until the piston/shoe cannot extend any farther, once the rebar is bent to 90 degree; do not continue to keep the switch in the “on” position and the motor running because this will cause internal tool damage.
6. After completing bend immediately switch “off “ and retract (#5) valve lever, remove bent rebar and repeat this process.